

Thank you for choosing REC-duo. This Quick-Guide helps you to understand and use your new ventilation system to get the most out of its performance.

**For installation and initial set-up please refer to the main manual.**

### REMOTE CONTROL

**0 - ON/OFF** - Device on/off.

**1 - PUSH-PULL MODE<sup>1</sup>** - 24 h operation at the set speed. Automatic: operation with alternating flow.

**2 - SPEED 1<sup>1</sup>** - Low speed setting.


**3 - SPEED 2<sup>1</sup>** - High speed setting.

**4 - TIMER-SET BOOST<sup>2</sup>** - Timer-set operation in ejection only at maximum speed.

**5 - SLEEP MODE<sup>1</sup>** - Maintains the selected operating mode at the set speed 1. To exit this mode before the end of the 8 hours, press any key (except 0).

**6 - FORCED FLOW CONTROL<sup>1</sup>** - The devices operate either in ejection only or in injection only. Press once: ejection mode. Press twice: injection mode.

**7 - FREE COOLING (no inversion)<sup>1</sup>** - No inversion of flow. Press once: flow inversion stops in the direction of rotation active at that moment. Press twice: all the devices invert flow and maintain this set direction of rotation.

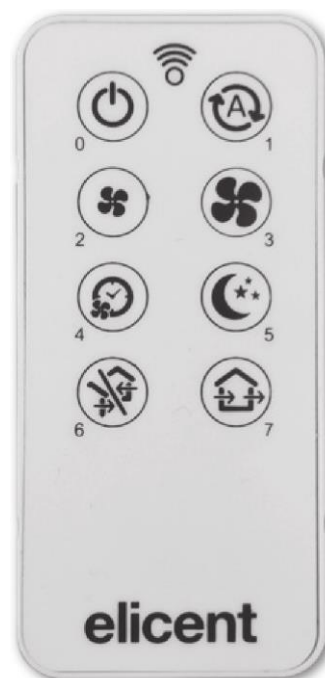


### NOTES

**1:** FUNCTION THAT CONTROLS ALL PRODUCTS PAIRED WITH THE REMOTE CONTROL.

**2:** FUNCTION THAT CONTROLS THE SINGLE PRODUCT PAIRED WITH ITS OWN REMOTE CONTROL

(not valid if only one remote control is used on several devices - see paragraph "PAIRING A REMOTE CONTROL WITH SEVERAL VENTILATION UNITS").

**LED INDICATION:** Every time a button is pressed an LED light on the remote will indicate that the command has been received.

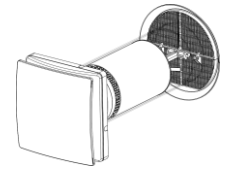

### LIGHT LEGEND

LED	DESCRIPTION	STATUS
	GREEN	EXTRACTION
	YELLOW	INTAKE
	RED	BOOST WITH TIMER
	FLASHING RED	DIRTY FILTER NEEDS CLEANING
	BLUE	MHY OPERATING
	FADING BLUE	SLEEP FUNCTION OPERATING
	FADING YELLOW OR GREEN	FREE COOLING (RC BUTTON 7)
	FLASHING YELLOW OR GREEN	FORCED FLOW OPERATING (RC Button 6)
	FLASHING WHITE/LIGHT BLUE	RECEIVING COMMAND FROM RC
	FLASHING RED/PURPLE	RESTORE FACTORY SETTINGS
	PURPLE	LED INTENSITY ADJUSTMENT
	FLASHING BLUE	DURING SPEED REGULATION 1
	FLASHING PURPLE	DURING SPEED REGULATION 2
	FLASHING LIGHT BLUE	SYNCRONISING DEVICES CANCEL SYNCRONISATION CANCEL RC PAIRING
	FLASHING BLUE WITH EXTENDED SEQUENCE	INDICATES A SLAVE UNIT
	FLASHING GREEN	INDICATES A MASTER UNIT

### CLEANING

